


In-ear stereo headset

with magnetic lock, Bluetooth 4.1

Instruction Manual

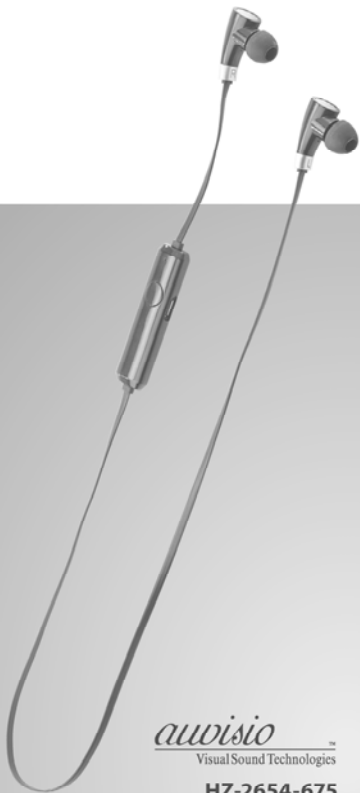

awisio™
Visual Sound Technologies

HZ-2654-675

CONTENTS

Your new Bluetooth headset ...4

Scope of delivery 4

Important information about getting started5

Safety information 5

Important information about disposal 7

Declaration of Conformity 8

Product details 9

Use 10

Charging 10

Switching on 10

Bluetooth connection 11

Volume control 11

Playing music 12

Calls 12

Switching off 13

Technical data 14

Information and answers to frequently asked questions (FAQs) relating to a number of our products, as well as any updated manuals, can be found on the web page:

www.auvisio.de

Enter the article number or article name in the search field.

YOUR NEW BLUETOOTH HEADSET

Dear Customer,

Thank you for purchasing this Bluetooth headset with magnetic lock. Enjoy your favourite music or make hands-free calls without the hassle of annoying wires. To listen, simply place the headset around your neck - thanks to the clever magnetic lock, it won't slip off your shoulders.

Please read this Instruction Manual and observe the information and tips for optimum use of your new headset.

Scope of delivery

- Headset with integrated rechargeable battery
- 2 pairs of earbuds (large, small)
- USB charging lead
- Instruction Manual

IMPORTANT INFORMATION ABOUT GETTING STARTED

DE

Safety information

- This Instruction Manual familiarises you with this product's functions. Keep this Instruction Manual in a safe place so you can refer to it at any time.
- To avoid damage to your health, set the volume to low before using the headset.
- Only set the volume as high as you need to clearly hear the audio playback in a quiet environment. Do not increase the volume during playback. Your ears gradually adjust to the volume so that even high volumes may seem normal. A high volume could damage your hearing.
- Do not increase the volume to drown out noise. The combination of noise and audio playback via your headset could damage your hearing.
- The product generates strong permanent magnetic fields. These can disrupt pacemakers and implanted defibrillators (ICDs).

Important information about getting started

Always maintain a distance of at least 10 cm between the headset and a pacemaker or implanted defibrillator.

- Do not use the headset while driving a vehicle or during any activity that requires concentration. Use is actually prohibited in many places. Familiarise yourself with applicable laws and regulations relating to the use of a headset in places you, as a vehicle driver, visit, and observe these rules and regulations.
- Headsets can cause ear infections if not cleaned properly. Clean the headset regularly with disinfectant. Contact your doctor if you experience any discomfort.
- Converting or modifying the product may compromise product safety. Caution: risk of injury!
- Never open the product unless authorised to do so. Never carry out repairs yourself!
- Take care when handling the product. It may be damaged by impact or by being dropped from even a low height.

- Keep the product away from moisture and extreme heat.
- Never submerge the product in water or other liquids.
- Subject to technical alterations and errors.

Important information about disposal

This electrical device and the integrated rechargeable battery do **NOT** belong in domestic waste. For proper disposal, please contact your local public collection points. Details about the collection point location and about any existing quantity restrictions per day/month/year can be obtained from relevant local authority information.



Declaration of Conformity

PEARL.GmbH hereby declares that the product HZ-2654 complies with R&TTE Directive 99/5/EC and RoHS Directive 2011/65/EU.




Head of Quality Assurance
Dipl. Ing. (FH) Andreas Kurtasz
16. 06. 2015

The detailed Declaration of Conformity can be found on www.pearl.de/support.

Enter the article number HZ-2654 in the search field.

PRODUCT DETAILS

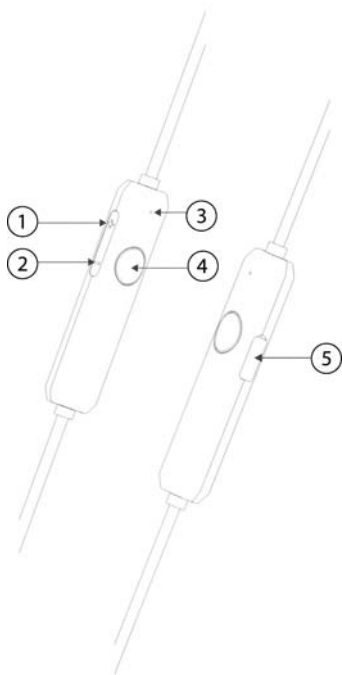

1. [+] button
2. [-] button
3. LED
4. Multifunction button
5. Micro USB port

USE

Fully charge the headset before using for the first time.

Charging

The LED flashes red when the headset needs charging.

Open the headset's micro USB port cover and plug in the micro USB connector on the USB charging lead. Be careful not to damage or break off the cover. Plug the lead's USB connector into a free USB port on your computer. During the charging process, there is a steady red LED light. When the headset is fully charged, the LED turns green.

Switching on

Press and hold the multifunction button for 4 seconds. The headset connects automatically to the mobile device it was last linked with if this is switched on and in range. If the headset has never been linked with a mobile device or the mobile device is not switched on, the LED flashes red rapidly.

Bluetooth connection

1. Switch off any other nearby Bluetooth devices. Make sure that your mobile device and the headset are close to one another.
2. While the headset is still switched off, press and hold down the multifunction button for 8 seconds. The LED flashes alternately red and green.
3. Activate Bluetooth on your mobile device and search for a Bluetooth connection in the vicinity (by scanning).
4. Select **HZ2654** from the list. The devices are now connected and the LED flashes green rapidly three times.



Please note:

If a PIN is requested during the connection process, please enter "0000".

Volume control

- Press [+] briefly to increase the volume.
- Press [-] briefly to reduce the volume.

Playing music

Start music playback on the connected mobile device.

- During playback, press the multifunction button to start or pause the playback.
- Press and hold [+] to jump to the next track.
- Press and hold [-] to jump to the previous track.



Please note:

If you do not receive any sound on the headset, go to the Bluetooth menu on your mobile device and activate the media player for HZ2654.

Calls

- Press the multifunction button briefly to accept an incoming call.
- Press and hold the multifunction button for 3 seconds to reject an incoming call.
- Press the multifunction button briefly to end a call.



Please note:

If you do not receive any sound on the headset, go to the Bluetooth menu on your mobile device and activate the call function for HZ2654.

Switching off

Press and hold the multifunction button for 4 seconds to switch off the headset.

TECHNICAL DATA

Charging interface	Micro USB	
Charging current	USB 5 V	
Charging time	Approx. 2 hours	
Li-ion rechargeable battery	60 mAh	
Bluetooth	4.1	
Bluetooth profiles	A2DP, AVCRP, HSP, HFP	
Frequency	20-20,000 Hz	
Microphone sensitivity	-42 dB	
Range	Approx. 10 m (in a free field)	
Run-time	Music playback	Approx. 5 hours
	Calls	Approx. 6 hours
	Stand-by	Approx. 5 days
Dimensions	25 × 20 × 12 mm (earphones)	
Weight	14 g	

Customer service: + 49 7631 360-350
Imported from: PEARL.GmbH
PEARL-Straße 1-3 | D-79426 Buggingen

© REV1 / 16. 06. 2015 - EB//BS//BR